

SFKB Gasbrännare

LÄS SÄKERHETSINSTRUKTIONERNA NOGGRANT INNAN ANVÄNDNING. SPARA INSTRUKTIONERNA.

Gaspåfyllning

- Kontrollera att gaspåfyllningsventilen är tät före fyllning.
- Använd endast butangas av hög kvalitet.
- Skaka gasbehållaren några gånger för att värma upp bränslet.
- Flytta flamanpassningsreglaget (2) till "—" position.
- Sätt behållarens munstycke vertikalt ner i gaspåfyllningsventilen. (FIGUR A).
- **Fyll 3–4 sekunder i taget, 3–5 gånger.**
- Efter påfyllning, vänta några minuter innan användning.

Antändning

- Flytta flamanpassningsreglaget (2) till "+" -läget.
- Tryck ner säkerhetslåset (3) tills det klickar på plats (FIGUR B).
- Tryck på tändningsknappen (6). Flamman tänds direkt (FIGUR C).
- Av säkerhetsskäl kan tändningsknappen (6) inte tryckas ner om säkerhetslåset (3) är på!

Flammjustering

- Justera flamlängden under användning genom att flytta flamanpassningsreglaget (2). Längre flamma, skjut reglaget mot "+", kortare flamma, skjut reglaget mot "-". För bästa resultat, behåll flamlängden ca 1/2 "till 1" (10–25 mm). Gör inte flaman för lång eftersom det slösar bara bränsle och flaman blir instabil.
- Justera flambredd under användning genom att trycka in luftreglageknappen (4) framåt. Det är lämpligt att arbeta och tända med luftreglageknappen (4) så långt bak som möjligt.
- Vid högre höjder fungerar brännaren inte med maximal flamlängdsinställning (med skjutreglaget helt till "+"). För bästa resultat, justera flamlängden till mellannivå mellan "+" och "-".
- Obs! Om tändningsknappen inte är helt nertryckt, kommer säkerhetslåset att klickas på omedelbart.

Stänga av

- För att stänga av, släpp tändningsknappen (6) eller dra ner det kontinuerliga flamlässpaken (5) om du haft den på.

Användning av kontinuerlig flammfunktion

WARNING: Var försiktig när flamlås är på.

Det kontinuerliga flamläset (5) måste kopplas av manuellt.

- För kontinuerlig flamma: håll ner tändningsknappen (6) och skjut den kontinuerliga flamlässpaken (5) uppåt (FIGUR D).
- Släpp tändningsknappen (6), flaman kommer att vara kvar (FIGUR E).
- För att stänga av flaman, skjut den kontinuerliga flamlässpaken (5) neråt (FIGUR F).

Varning

- Läs säkerhetsinstruktionerna noggrant innan användning. Spara instruktionerna för framtida användning.
- Fyll på behållaren utomhus eller på väl ventilerad plats.
- Använd endast butan som bränsle.
- Håll brännaren och gaspatronen utom räckhåll för barn.
- Använd inte en skadad brännare.
- Butan är mycket brandfarligt, hantera med försiktighet.
- Fyll på behållaren långt ifrån andra personer eller lättantändliga föremål. Rök inte under byte eller påfyllning.
- Läs anvisningarna på gaspatronen före påfyllning av enheten.
- Ha alltid en brandsläckare nära brännaren och arbetsområdet.
- Demontering, ändring av brännaren eller tillägg av delar kan vara farligt.
- Försök aldrig att reparera brännaren och använd aldrig andra bränslen än föreskrivet.
- Av miljöskäl bör tomma gaspatroner lämnas i specifika behållare för återvinning.
- Undvik inandning av gas.
- Rikta aldrig flaman mot någon person eller lättantändligt material.
- Låt brännaren svalna efter användning.
- Se till att brännaren är ordentligt avstängd efter användning.
- **WARNING! Flamman syns dåligt i solen.**
- Förvaras inte i temperaturer över 40 °C (104 °F).
- Förvara brännaren vertikalt.
- Var uppmärksam på att säkerhetslåset hoppar till sin ursprungliga position efter användning.
- Håll apparaten borta från smuts.
- Var försiktig så att du inte tappar gasbrännaren medan du använder den, eftersom det är den vanligaste orsaken till funktionsfel.
- **WARNING: Flamskyddet kan vara väldigt varmt efter användning.**
- Vid eventuell gasläcka (lukt av gas), ta ut brännaren utomhus eller på en väl ventilerad plats omedelbart där läckan kan kontrolleras.
- Kontrollera aldrig läckage med eld, endast med läckagespray.
- **Lämna aldrig en brännare med lågan obevakad.**




- Kategori: Direkt tryck butan
- Använd butangas
- Använd endast i väl ventilerade utrymmen
- Förbrukningshastighet: 45,57 g / h. (0.60kW)

- Läs anvisningarna innan användning
- Flamskydd kan bli mycket varmt
- Håll borta från barn





CE 1008

TECH UNION CO., LTD. an ISO9001 Company
Add. 5F-2, 26 Wu-Chuan 2nd Rd., Wu-Ku Ind. Disk.,
Hsin Chuang City, (248) Taipei County, Taiwan, R.O.C

Identifiering av delar

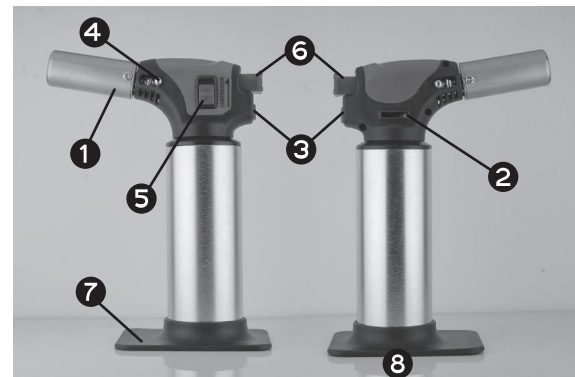

1. Flamskydd
2. Flamanpassningsreglage
3. Säkerhetslås
4. Luftreglageknapp (flambredd)
5. Kontinuerlig flamlässpak
6. Tändningsknapp
7. Avtagbar stativ
8. Påfyllningsventil i botten av brännaren

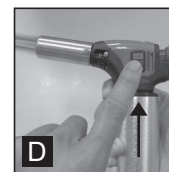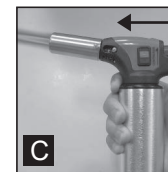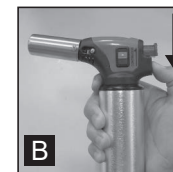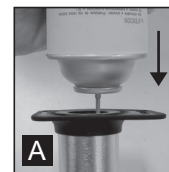

Försök inte reparera eller demontera delar av brännaren.

S-MRC-982 Kitchen torch

READ CAREFULLY THE INSTRUCTIONS BEFORE USING THE APPLIANCE. KEEP THE INSTRUCTION FOR FUTURE USE.

Gas Refilling

- Prior to filling with butane, make sure the gas refill valve is tight.
- Use only high quality butane gas.
- Shake gas container a few times to warm fuel up.
- Move flame adjustment slide (2) to "-" position.
- Insert the container nozzle vertically down into the gas refill valve. (FIGURE A).
- After fueling, allow a few minutes for gas to stabilize.

Igniting

- Move flame adjustment slide (2) to "+" position.
- Push down the safety lock (3) until it clicks in place (FIGURE B).
- Press ignition button (6). and the flame will ignite instantly (FIGURE C). For safety reasons, the ignitor button will not depress unless safety lock is locked in place!

Flame Adjustment

- Adjust the flame length during use by moving flame adjustment slide (2). Sliding towards the "+" symbol will make the flame longer. sliding towards the "-" symbol will make the flame shorter. For best results, keep the flame length at about 1/2 "to1"(10~25mm).Don't make the flame too long as it will only wastes fuel and make the flame unstable.
- Adjust the flame width during use by pushing the air control lever (4) with fingers. It is advisable to operate and light with air control knob as far back as possible.
- At higher altitudes, torch may not operate on maximum flame length setting (with slide pushed all the way to "+"). For best results, adjust the slide to the mid-range between "+" and "-". Note: If the ignition button is not fully press to the end, the safety lock will immediately click-up causing the ignition unable to light or "press". If this case happens, restart all ignition procedure until you successfully ignite the flame.

Turning Off

- To turn the flame off, simply release ignitor button.

Using Continuous flame feature

- CAUTION: use extreme caution when flame is locked on as flame will be continuous and will not turn off until the continuous flame lock lever (5) is MANUALLY disengaged.
- While holding down the ignitor button (6), slide the continuous flame lock lever (5) towards you (FIGURE D).
 - Release the ignitor button (6), the flame will remain on (FIGURE E).
 - To turn off the flame, slide the continuous flame lock lever (5) away from you (FIGURE F).

Warning


- Read carefully the instructions before using the appliance. Keep the instruction for future use.
- Operation outside or in a well-ventilated place.
- Use only Butane lighter fuel.
- Keep the torch and gas cartridge out of reach of children.
- Do not use an appliance which shows any damage.
- Butane is very inflammable, handle with care.
- Refill the tank in a well-ventilated place, in a flame or ignition source free atmosphere, far from other persons. Do not smoke while replacing or refilling.
- Before refilling the device. Read the instructions printed on the gas cartridge.
- Always have a fire extinguisher near the torch and work area.
- Disassembling, modifying the torch or adding parts may be hazardous.
- Never attempt to repair the torch and never use unapproved fuels.
- Do not perforate or burn the gas cartridges even when they are empty.
- For environmental reasons the gas cartridges should be disposed in specific containers for subsequent recycling.
- Avoid breathing welding / soldering fumes. Use a ventilator to maintain good ventilation.
- Work only in a clean place, far from combustible or greased materials.
- Do not straight the flame to any person or flammable materials
- Allow the appliance to cool down normally after using. Make sure that the appliance is shut down before storing.
- Warning! The flame is not good visible in the sun.
- Do not store in temperatures over 40°C(104°F). Never leave the torch in direct sunlight or in areas where high temperatures are generated.
- Store the device vertically.
- Pay attention that the safety lock jumps to its original position after use.
- Keep the appliance away from grime. Be careful not to drop the gas torch while using, as it's the most frequent reason for malfunction.
- Caution: the flame guard could be very hot after using.
- In case that a gas leak (smell of gas), take the appliance outside to a well-ventilated place immediately, where the leak may be checked.
- Never check the leakage with flame but only with leak detection spray.
- Do not put an ignited appliance unattended at any time.

- | | |
|---|--|
| • Category: direct pressure butane | • Read the instructions before using the appliance |
| • Use butane gas | • Flame guard may become very hot |
| • Only use in well ventilated areas | • Keep away from children |
| • Consumption rate: 45.57g/hr. (0.60kW) | |





CE 1008

TECH UNION CO., LTD. an ISO9001 Company
Add. 5F-2, 26 Wu-Chuan 2nd Rd., Wu-Ku Ind.Disk.,
Hsin Chuang City,(248) Taipei County, Taiwan, R.O.C

Parts Identifications

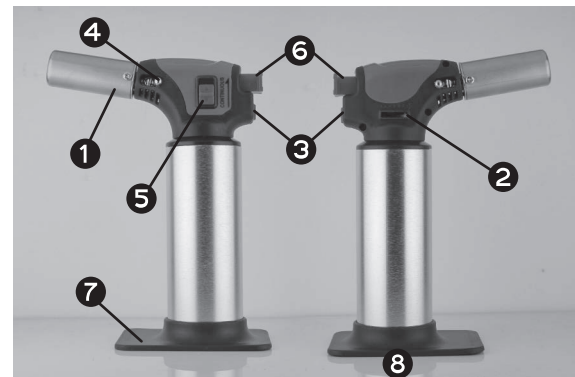

1. Flame Guard
2. Flame Adjustment Slide
3. Safety Lock
4. Air Control Lever
5. Continues Flame Lock Lever
6. Ignitor Button
7. Removable Stand
8. Filler Valve (not shown, under torch)

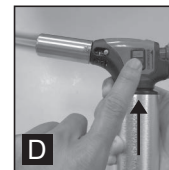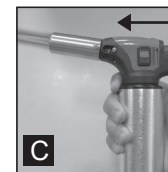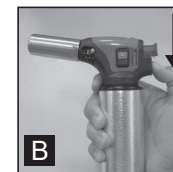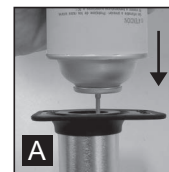

Do not try to repair or disassemble any parts of the torch.